

Manual Instruction

for Table-Top Screen

U-WORK



Grandview Crystal Screen Canada Ltd.

#11- 3751 North Fraser Way,  
Marine Way Business Centre,  
Burnaby, BC, Canada V5J 5G4  
Tel: 1-604-412-9777 Fax: 1-604-412-9796  
Website: www.grandviewscreen.ca

Guangzhou Grandview Crystal Screen Co., Ltd.

P.O. 511400 Federal Ind. Zone No. 363, Yushan West Road,  
Shiqiao, Panyu District, Guangzhou, Guangdong, China  
Tel: +8620-8489-9499 Fax: +8620-8480-3343  
Website: www.grandviewscreen.com




Model: PT-Uxx

Thank you for purchasing a Grandview projection screen.

Before use, please read instructions carefully. After installation, keep instructions for future reference.

Description

Illustration

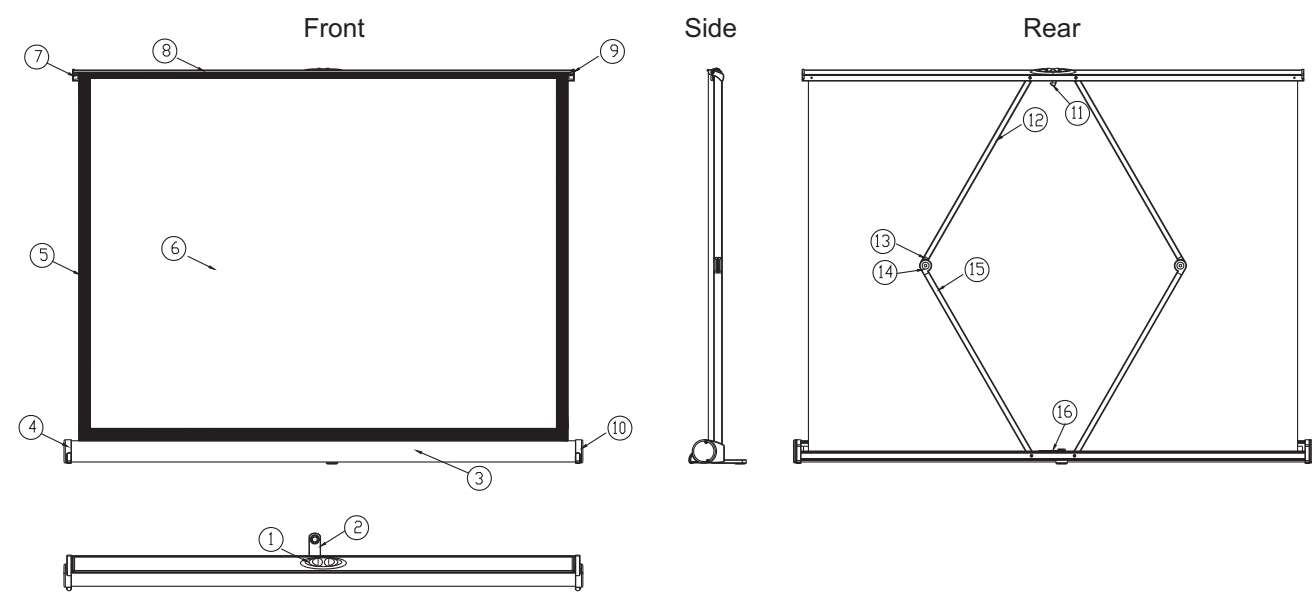

Part name

|   |              |   |               |
|---|--------------|---|---------------|
| ① | Opener       | ⑨ | End Cap       |
| ② | Foot         | ⑩ | Right End Cap |
| ③ | Casing       | ⑪ | Conjugation   |
| ④ | Left End Cap | ⑫ | Support Lever |
| ⑤ | Black Border | ⑬ | Joint         |
| ⑥ | Fabric       | ⑭ | Joint         |
| ⑦ | End Cap      | ⑮ | Support Lever |
| ⑧ | Cover        | ⑯ | Locker        |

Accessories

- ☐ Bag (1pcs)
- ☐ Manual Instruction (1psc)



## Note


The surface of screen is processed to achieve good performance of the reflector. Any damage of surface will influence projection effects so please use this product in right way.

### Caution

- Please do not shake the screen by hand.




Prohibited

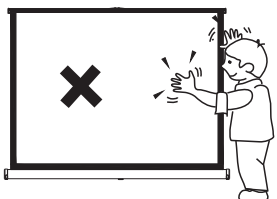

- Please do not use any cloth with water, volatile oil and corrosive cleaning agents to clean the screen, because they will make the surface metamorphism and paint off.




Prohibited

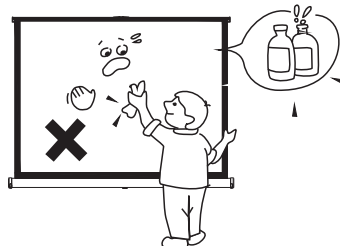

- Please do not make any marks on screen surface.




Prohibited

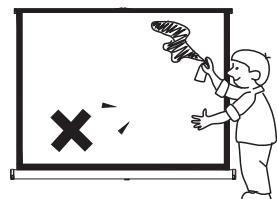

- Please do not pull the screen strongly that it will cause the risk of damage.



Prohibited

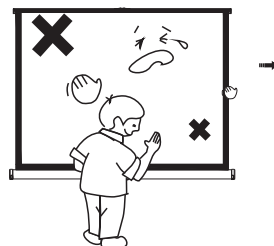


### Maintenance

- Any stains on the casing, please use dry-cloth to clean softly. If too serious, please use soft-cloth with water-diluted neutral detergent to clean.




Neutral Detergent

- Please use a brush to clean the dust of screen surface softly.

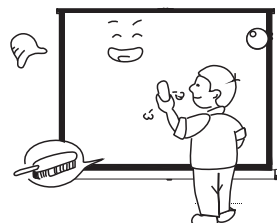

### Location Caution

- Please keep the screen far away from sunshine, dust and wet. Avoid using the screen in strong wind.

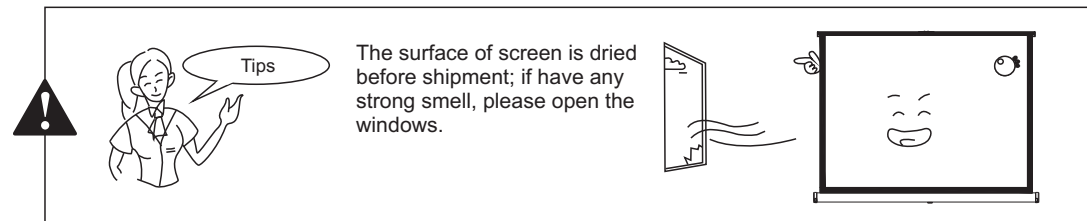

### Caution

- Please contact your local dealer for repairing and replacing. Please contact us if you have any questions. Avoid taking apart the fixture yourself.






Prohibited Taking Apart



## Specifications

| Format | Model   | Specification (In) | Viewing area |        | Screen dimension |        | Net weight (kg) |
|--------|---------|--------------------|--------------|--------|------------------|--------|-----------------|
|        |         |                    | W (mm)       | H (mm) | L (mm)           | A (mm) |                 |
| 4:3    | PT-U-32 | 32                 | 650          | 488    | 742              | 566    | 1.13            |
| 4:3    | PT-U-40 | 40                 | 813          | 610    | 905              | 688    | 1.46            |

Note: Sizes and specifications are subject to change at any time. Refer to real product for exact data.  
The tolerance for L is  $\pm 5$ mm.

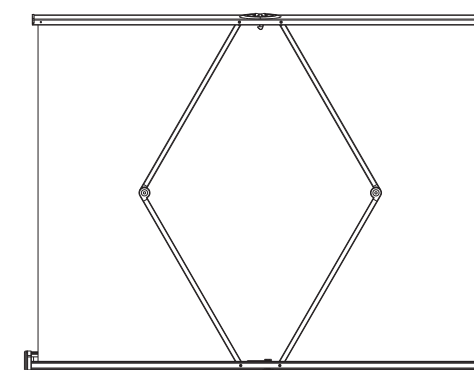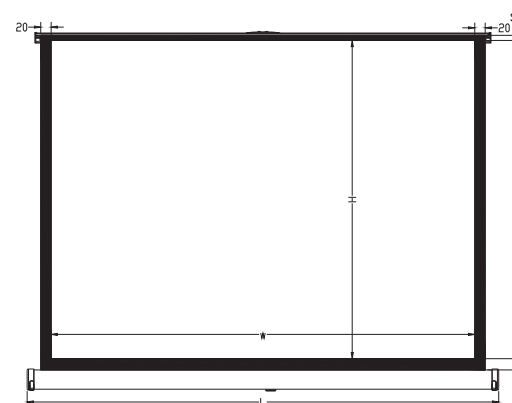

## Expanding

1. Stay the screen on suitable position and the screen faces to projector, and the set up the foot of screen (figure 1, 2 and 3)

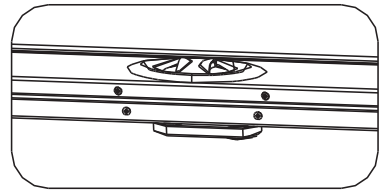


Figure1

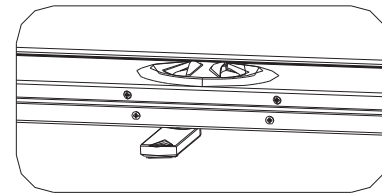


Figure 3

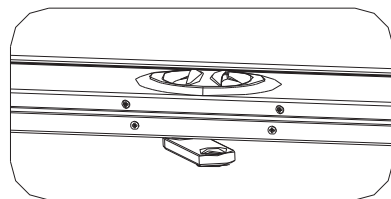


Figure 2

2. According to figure 2-1, use fingers to hold the opener, and then pull the screen up to your desired position slowly (figure 2-2)

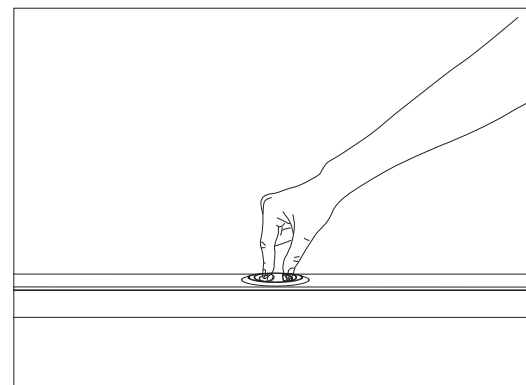


Figure 2-1

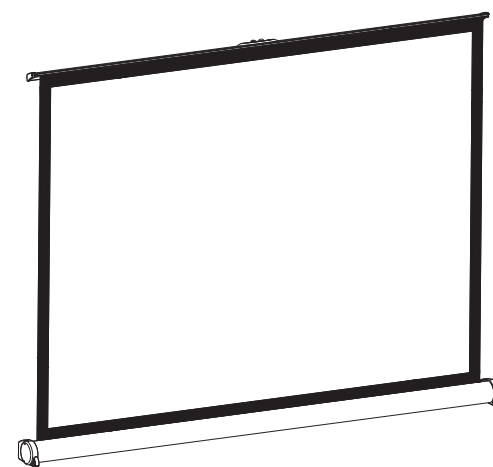


Figure 2-2

## Retracting

1. According to figure 3-1 and 3-2, following the steps to close the screen.

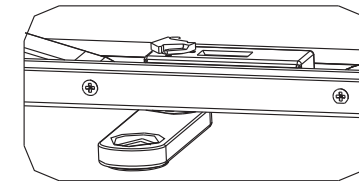


Figure 3-1

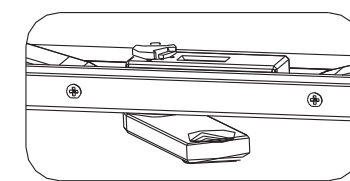


Figure 3-2

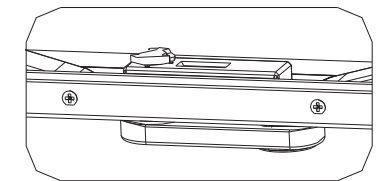


Figure 3-3

2. According to figure 4-1, using fingers to hold the opener and push the screen down (figure 4-2). Please ensure that the cover is locked to the casing that the retracting is completed (figure 4-4).

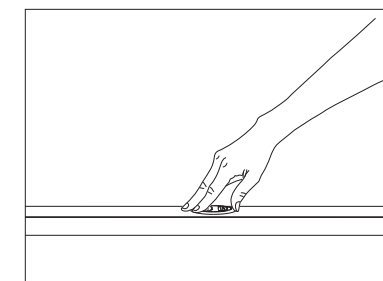


Figure4-1

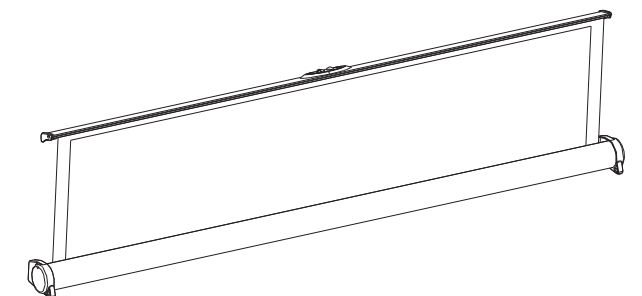


Figure4-2

Note: Avoid hurting fingers while running those operations (figure 4-3).

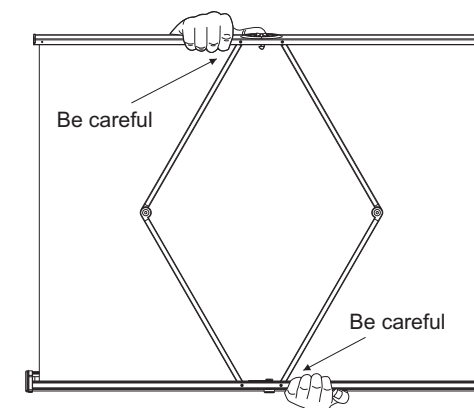


Figure4-3

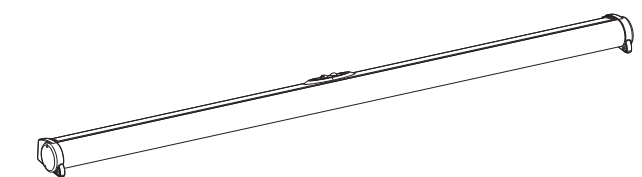


Figure4-3